

CX410W

ColorX 2K 4MP Wi-Fi security camera with true full-color night vision, intelligent detection, customizable warm light

- 2K 4MP High Resolution with HDR
- 2.4/5 GHz Dual-Band Wi-Fi
- Person/Vehicle/Animal Detection



Specifications

Video & Audio	
Image Sensor	1/1.8" CMOS sensor
Resolution	2560X1440(4Megapixels)@20FPS
Lens	f=4.0mm fixed, F=1.0
Video Compression	H.264
Field of View	Horizontal: 89°; Vertical: 46°
Infrared Night Vision	N/A
Color Night Vision	With spotlights: 4pcs/3W/3000K
Frame Rate	Main stream: 2fps - 25fps (default: 20fps) Sub stream: 4fps - 15fps (default: 10fps)
Code Rate	Main stream: 2048Kbps - 4096Kbps (default: 3072Kbps) Sub stream: 64Kbps - 512Kbps (default: 256Kbps)
Audio	Two-way audio
Power Requirements	

Power Requirements	DC 12.0V $\frac{1}{3}$ 1A, <12W
Interface	
Power Port	DC power port
Ethernet Port	One 10M/100Mbps; RJ45
SD Card Slot	Supports Max. 256GB microSD card
Reset Button	YES
Audio In/Out	Built-in microphone and speaker
Wi-Fi	
Wireless Standard	IEEE 802.11 ac/a/b/g/n
Operating Frequency	2.4GHz/5GHz
Wireless Security	WPA-PSK/WPA2-PSK
Software	
Browsers Supported	Edge, Chrome, Firefox, Safari
OS Supported	PC: Windows, Mac OS; Smartphone: iOS, Android
Protocols & Standards	HTTPS, SSL, TCP/IP, UDP, HTTP, IPv4, UPnP, RTSP, RTMP, ONVIF, SMTP, NTP, DHCP, DNS, DDNS, FTP, P2P
User Access	Max. 20 users (1 admin & 19 user); Max. 12 simultaneous streams (2 main & 10 sub streams)
Other Feature(s)	
Smart Alarm	Motion detection; person detection; vehicle detection; animal detection
Recording Modes	Motion-triggered recording (default); Scheduled recording, 24/7 recording
Time Lapse	YES
Smart Home Compatibility	Google Assistant
Working Environment	
Operating Temperature	-10°C~55°C (14°F~131°F)
Operating Humidity	10% ~ 90%

Weatherproof	IP67
Mechanical	
Dimensions	Φ67*187mm
Weight	486g
Warranty	
Limited Warranty	2-year limited warranty. For support, visit https://support.reolink.com/hc/en-us/ .

Gallery & Specs



1. Antenna
2. Aluminum housing
3. 3000K warm light
4. Lens
5. Mounting bracket
6. Speaker
7. Microphone
8. microSD card slot



1. Turn the adjustment knob counterclockwise to loosen the bracket and adjust the camera in any direction.
2. After adjusting, turn the adjustment knob back (clockwise) to secure the camera in place.



1. Power port
2. Reset button
3. Network port
4. Waterproof lid

www.reolink.com