



Monteringsanvisning

Förhöjningsring Purus Line & Purus Corner

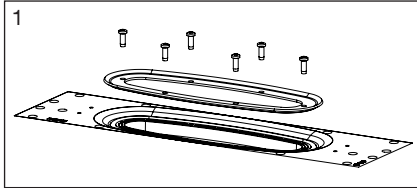


Skruva loss klämringen i utloppshuset. Spara skruvarna till klämringen. Lämnna o-ringen i sitt säte och säkerställ att den är på sin plats.

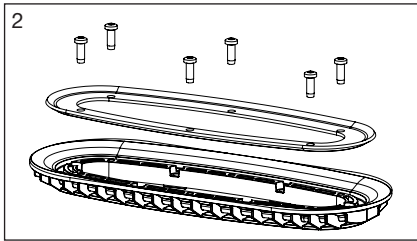


Skruva loss skruvarna i förhöjningsringen och ta bort klämringen. Lämnna o-ringen i sitt säte och säkerställ att den är på sin plats.

Observera! Det går att använda sig av flera förhöjningsringar för att få önskad höjd, använd max 2 ovanpå varandra. Vid användning av flera förhöjningsringar använd skruven PT A2 5x30.

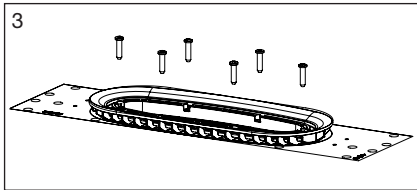


Skruva fast förhöjningsringen i utloppshuset med de sex skruvarna som medföljer.

Flyt sedan golvet och applicera tätskiktet enligt tätskiktsleverantörens anvisningar. För placering nära vägg ska kombinationen golvbrunn och tätskikt vara godkänd enligt branschreglerna för Väggnära Golvbrunnar. Se branschorganisationernas hemsidor.

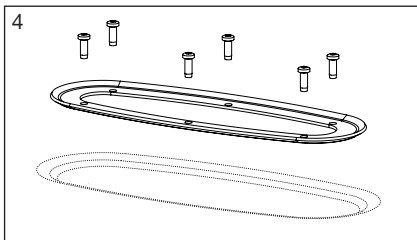


Tryck ner klämringen i sätet, för att underlätta monteringen kan man göra hål med syl i brunnsmanchetten för de sex skruvarna.

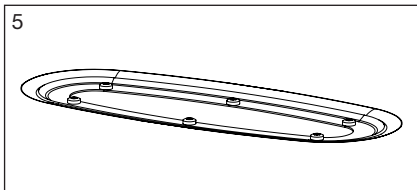


Skär med en kniv längs insidan av klämringen, så att inget tätskikt sticker ut. Kontrollera renskärningen genom att lyfta ur vattenlåset ifrån utloppshuset.

Installation instructions

Extension ring Purus Line & Purus Corner

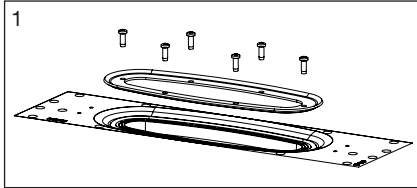


Unscrew the clamping ring from the outlet. Save the screws to the clamping ring. Leave the o-ring in its seat and make sure it is in place.

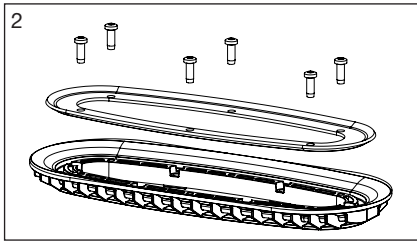


Unscrew the screws in the extension ring and remove the clamping ring. Leave the o-ring in its seat and make sure it is in place.

Note! You can use several extension rings to get the desired height, use a maximum of 2 on top of each other. When using multiple extension rings use screw PT A2 5x30.

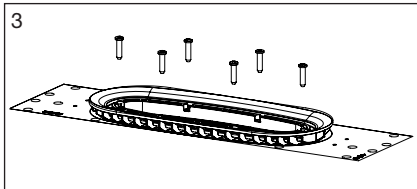


Screw the extension ring into the outlet with the six screws provided.

Cast the floor and apply the waterproofing membrane according to the supplier's installation instructions. For installation close to wall, the combination floor gully and waterproofing membrane must be approved according to the industry regulations for Väggnära Golvbrunn. See the industry organizations' websites.

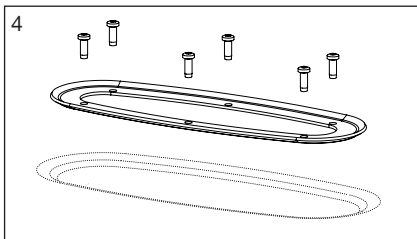

Press down the clamping ring in the seat. In order to facilitate the installation you can make holes with a cylinder in the sleeve for the six screws.

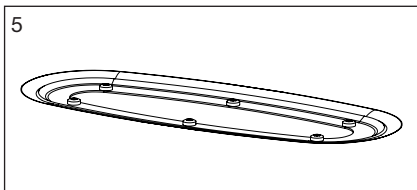

Cut with a knife along the inside of the clamping ring to remove the sealing layer. Check the cutting cut by removing the water trap from the outlet.