

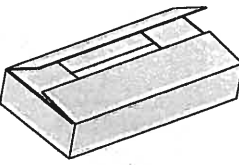




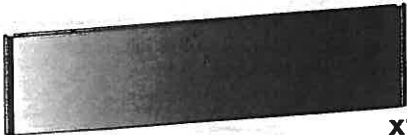



Descrição do equipamento Description of the equipment	 x1  x1	
	 x1	 x2 x2  x2  x4  x2 x2



Do not drag the bathtub on the floor.

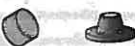

Assistance may be required.

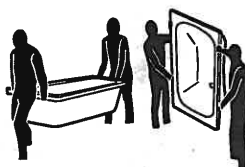

Always remember that you are handling glass



Bathtub metal feet must be installed before starting the panel's assembly.




Before the installation, the panels and bathtub shall be checked for accuracy to size, color, and manufacture defects. Claims in respect to defects which had already existed before the installation cannot be admitted after the installation.




The drain and overflow fittings shall be installed in conformity with the manufacturer's instructions




Dimensional strictness $\pm 5\text{mm}$

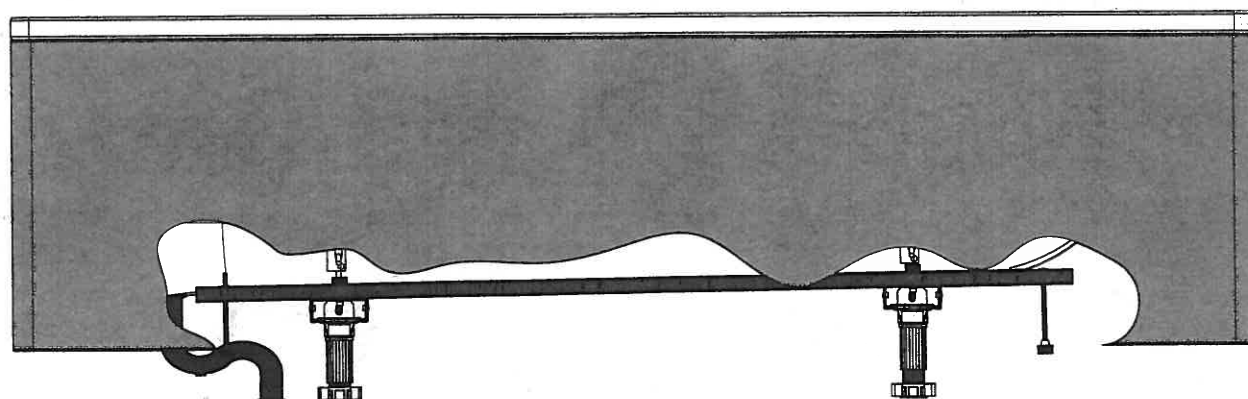


- 1 Montar os pés da banheira de acordo com as instruções de montagem.
Assemble the bathtub metal feet according with the attached installation instructions.

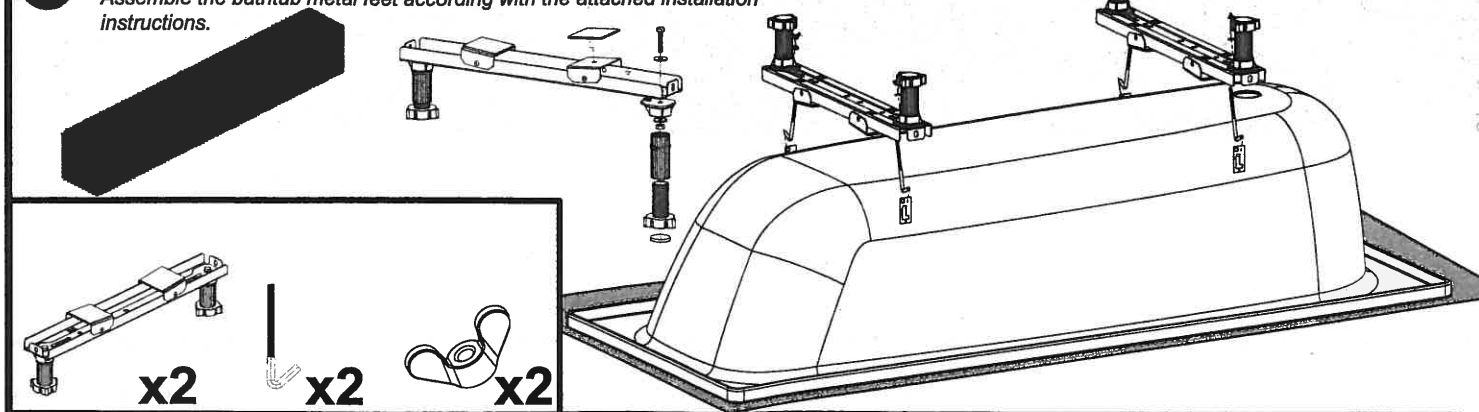


- 2 Montagem dos suportes metálicos na aba da banheira
Fixing metallic parts on the bathtub edges

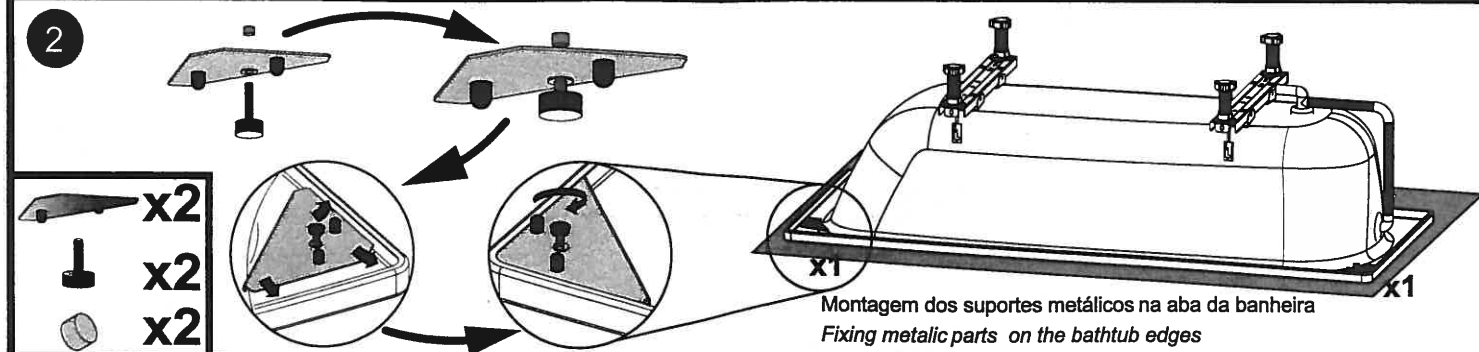

- 3 Ajustes dimensionais
Dimensional adjustments

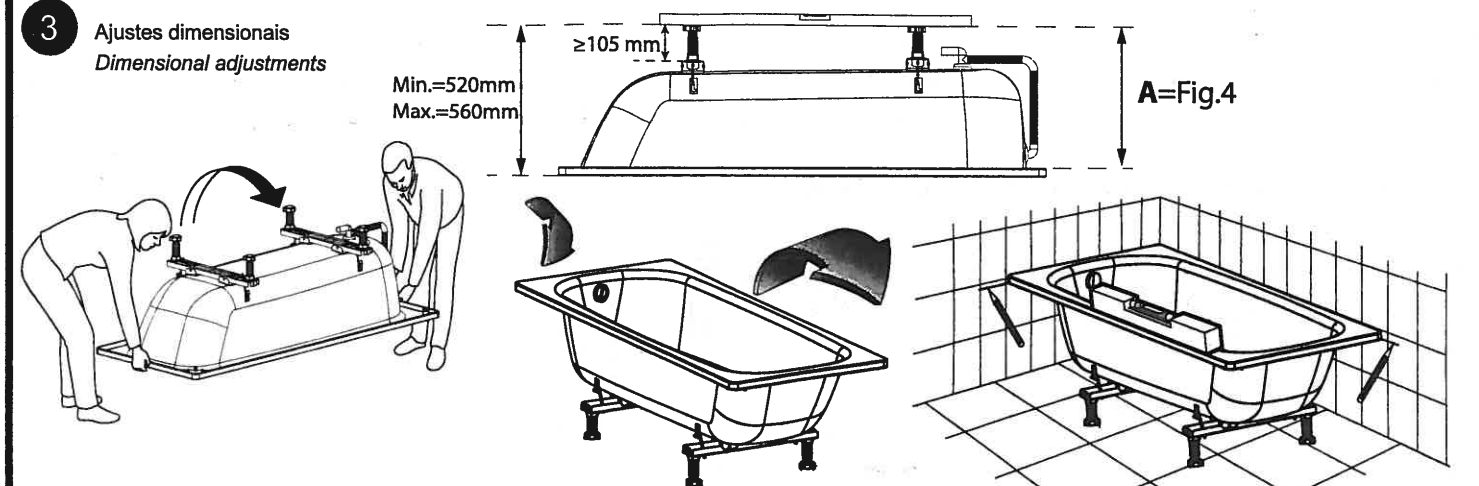





- 4 Fixar a banheira à parede de acordo com as instruções
The bath rim should be supported on the sides against the wall

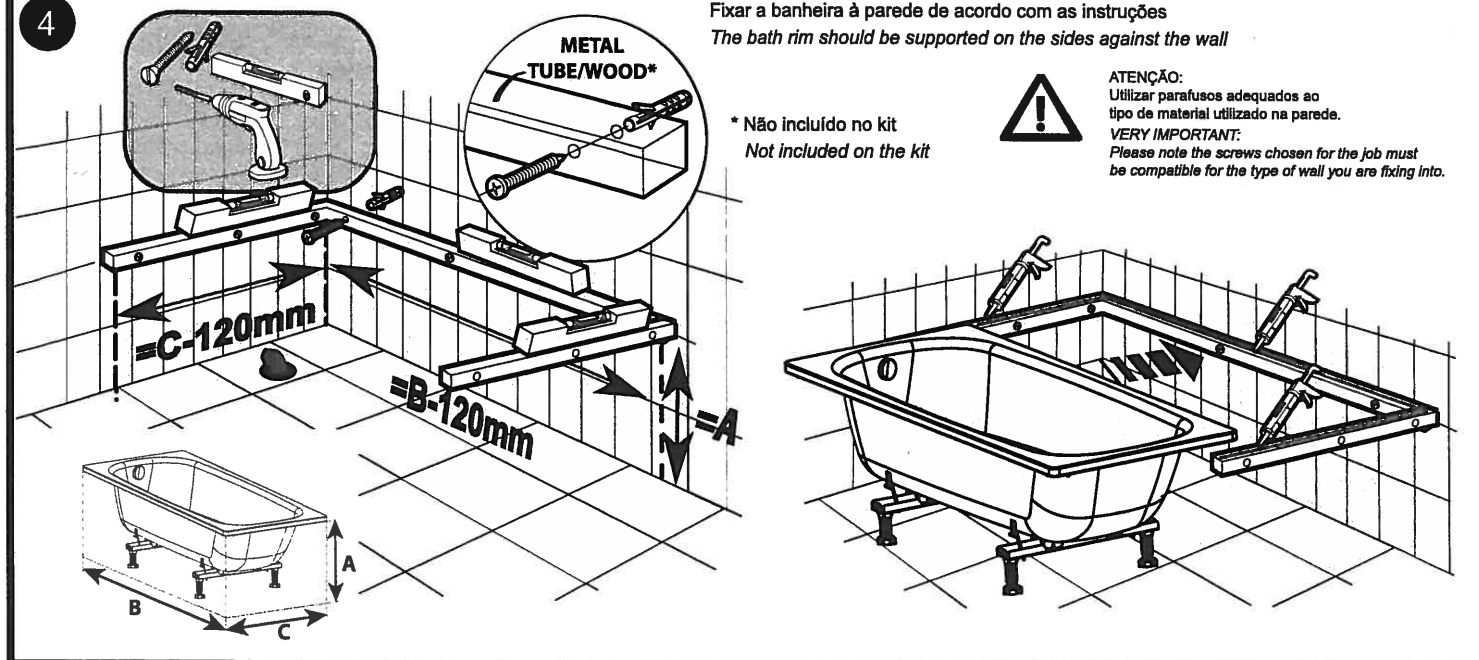


5




Montar as ligações de esgoto no local destinado
Connect the bathtub drain and overflow fittings
to the local sewerage

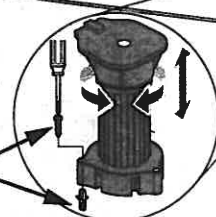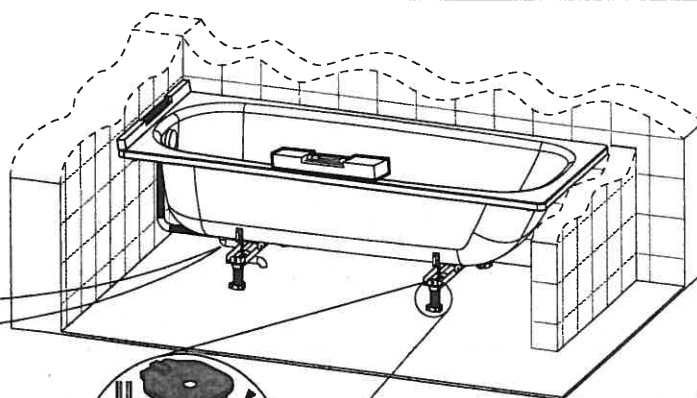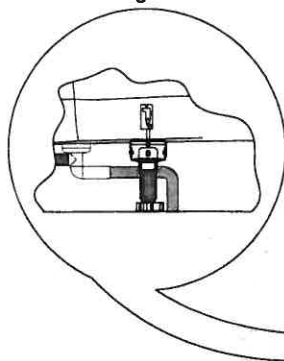

Não incluído no kit
Not included on the kit


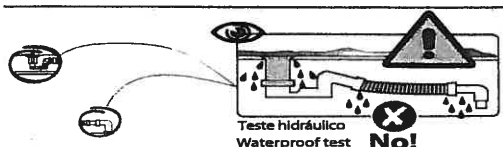


6

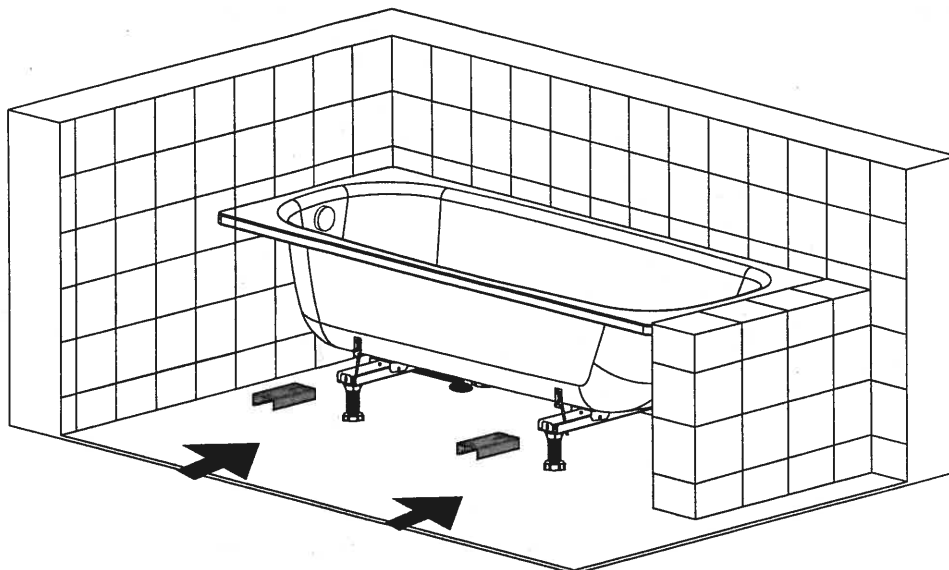

x2

7

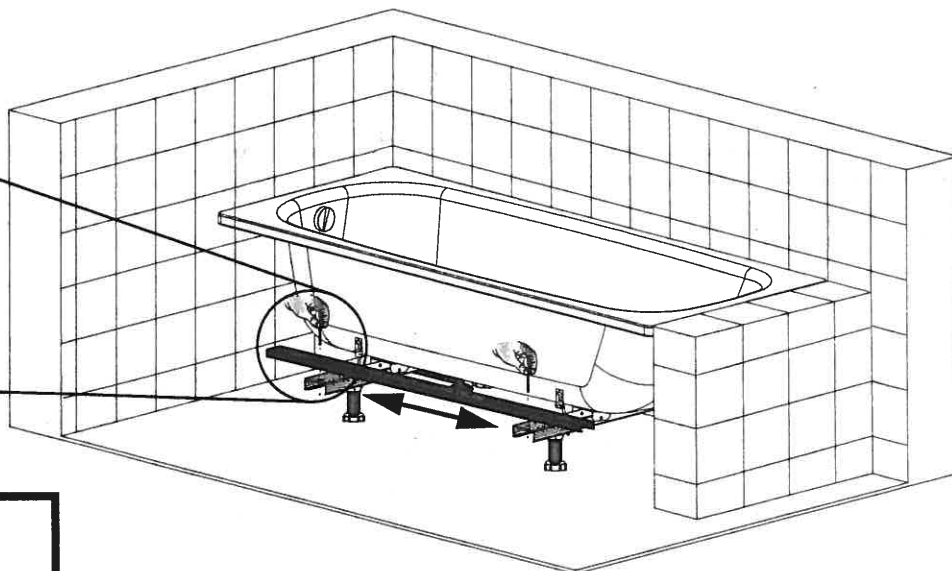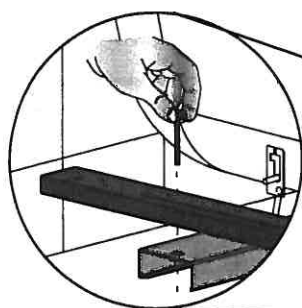


x1



x2


8

Parafuso e cone de aperto do painel
Screw and fastening cone of panel

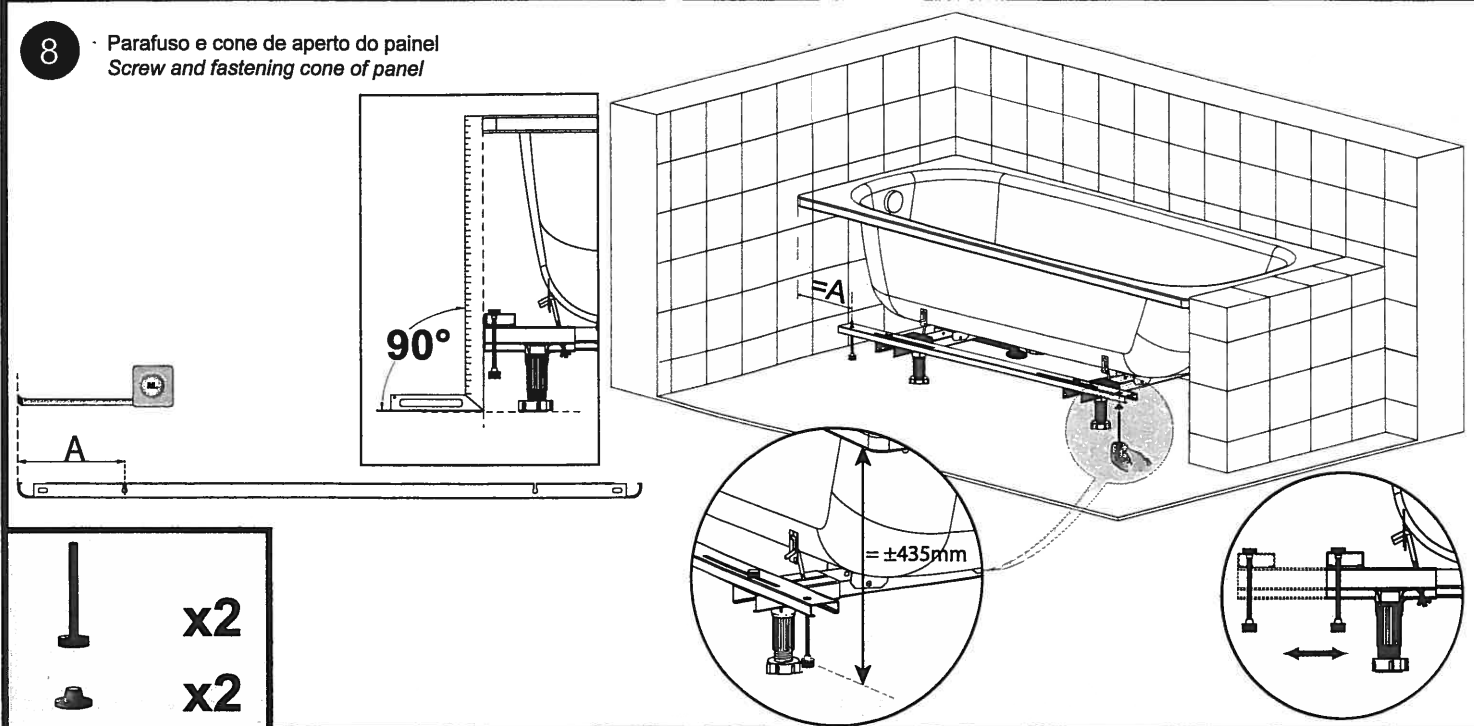


9

Colocação e ajuste
do painel frontal
Front panel assembly

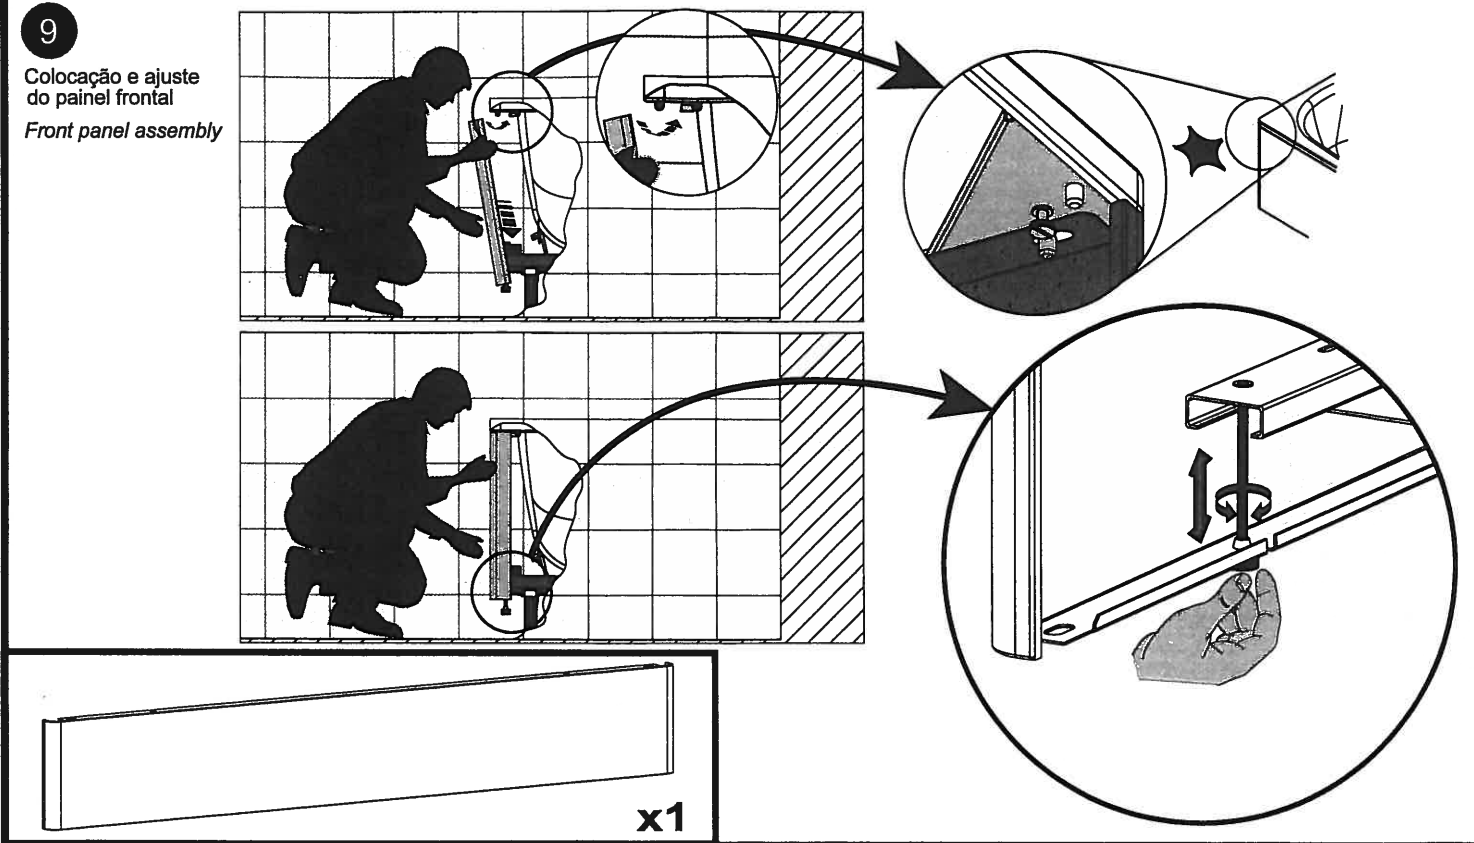


10


Inspecção e verificação
Inspection and verification

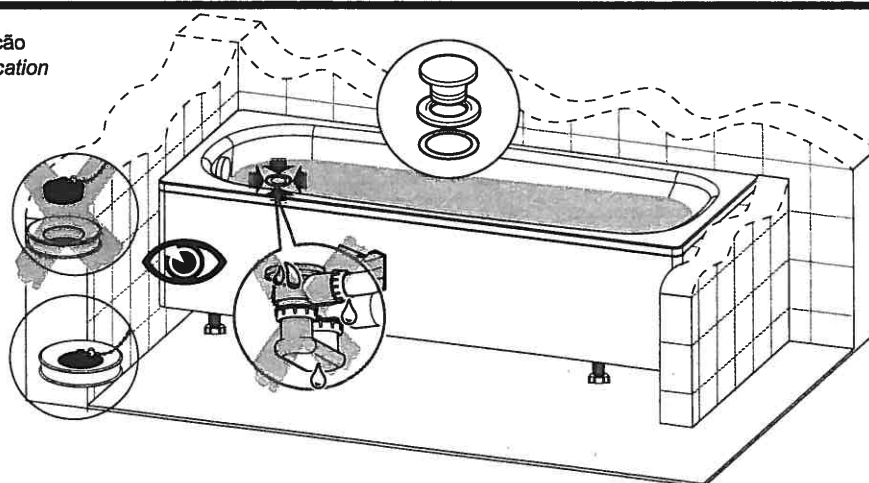

Após completar o trabalho deverá selar todas as juntas com silicone apropriado
After all work has been completed, all joint edges have to be sealed with the appropriate flexible sealant

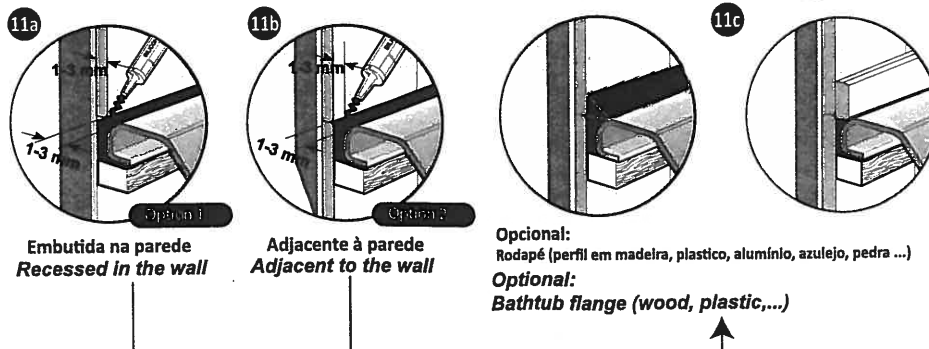

Limpeza
Cleaning

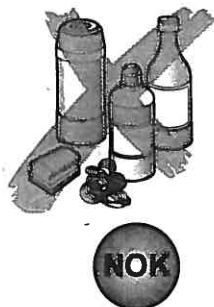

Notas:
Notes:

Notes.

LAUFEN

Laufen Bathrooms AG
Wahlenstrasse 46
CH-4242 Laufen, Switzerland
www.laufen.com

LAUFEN QUALITY CONTROL

Controller's Name: _____

Fabrication-No.: _____

Date: _____



Laufen Bathrooms AG
EN 14516

Postfach 432

CH-4242 Laufen