



Descrição do equipamento
Description of the equipment

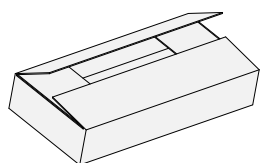

x1

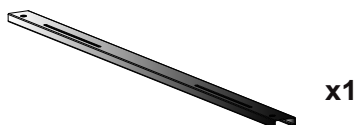

x1



x1



x2



x2



x2



x4




x2




x2



Do not drag the bathtub on the floor.

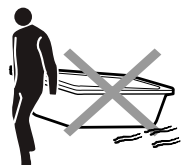

Assistance may be required.

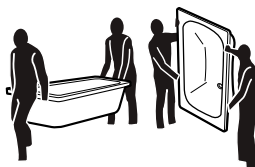

Always remember that you are handling glass



Bathtub metal feet must be installed before starting the panel's assembly.




Before the installation, the panels and bathtub shall be checked for accuracy to size, color, and manufacture defects. Claims in respect to defects which had already existed before the installation cannot be admitted after the installation.




The drain and overflow fittings shall be installed in conformity with the manufacturer's instructions




Dimensional strictness $\pm 5\text{mm}$

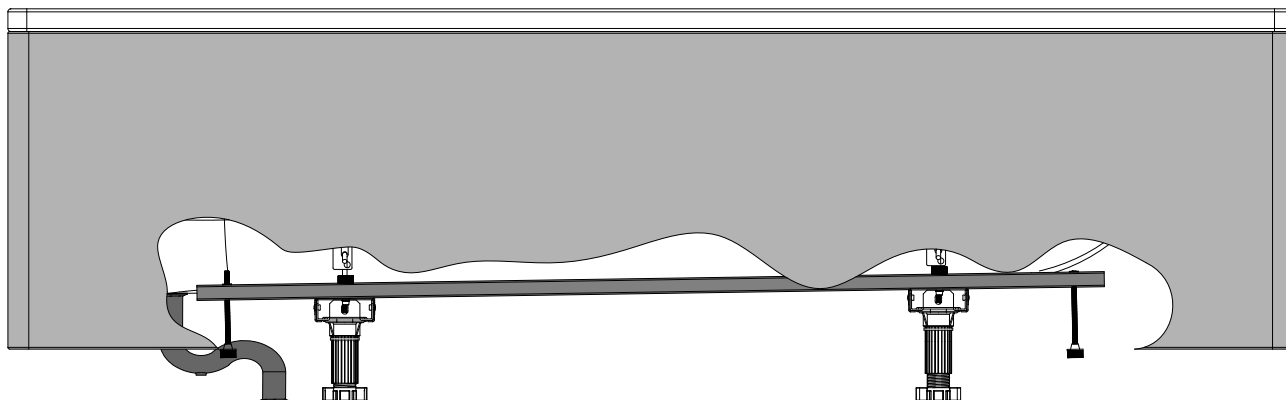


- 1** Montar os pés da banheira de acordo com as instruções de montagem.
 Assemble the bathtub metal feet according with the attached installation instructions.

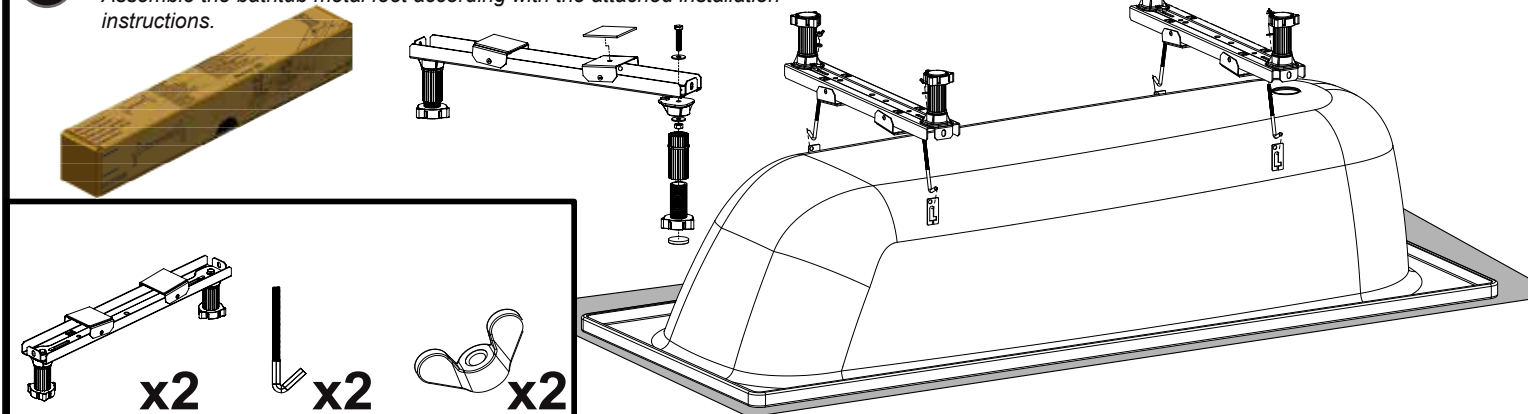


- 2** Montagem dos suportes metálicos na aba da banheira
 Fixing metallic parts on the bathtub edges

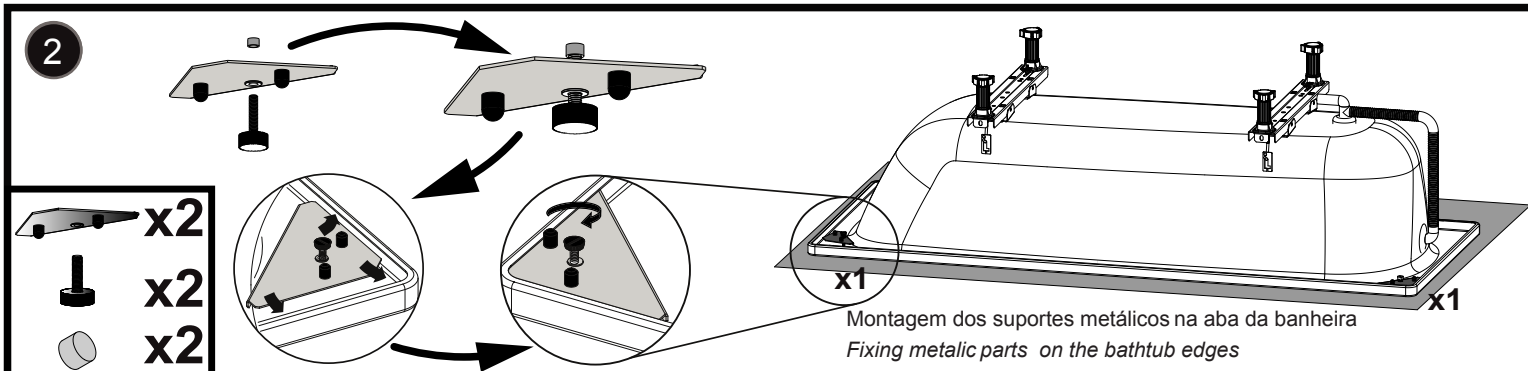

- 3** Ajustes dimensionais
 Dimensional adjustments

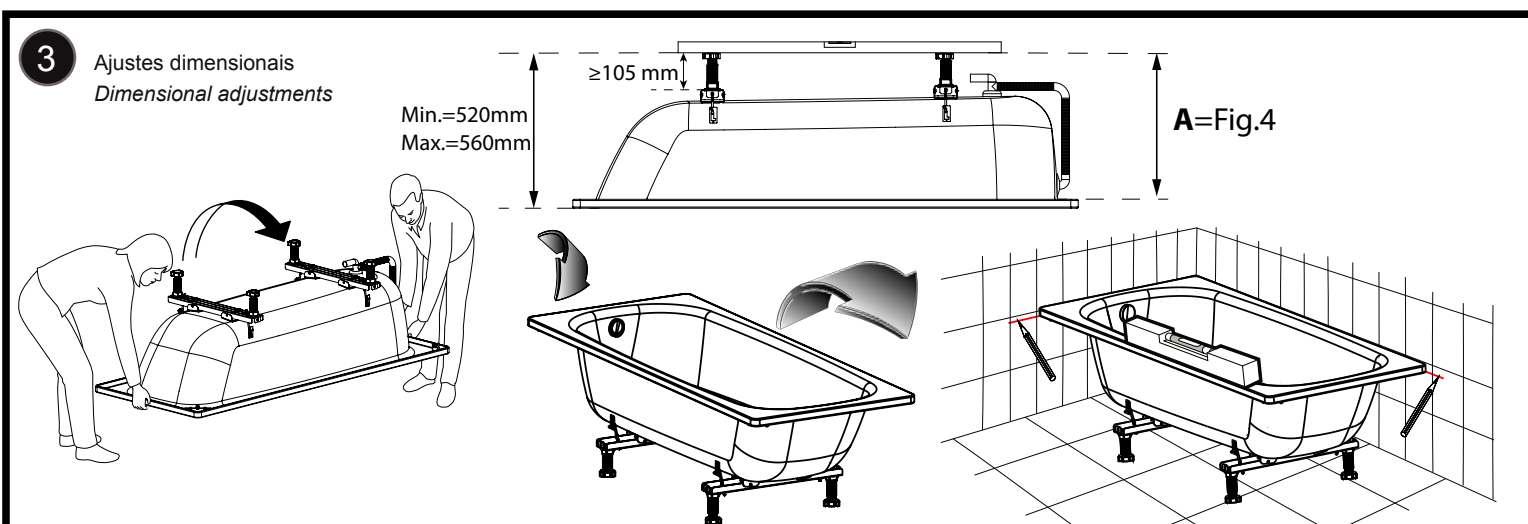





- 4** Fixar a banheira à parede de acordo com as instruções
 The bath rim should be supported on the sides against the wall

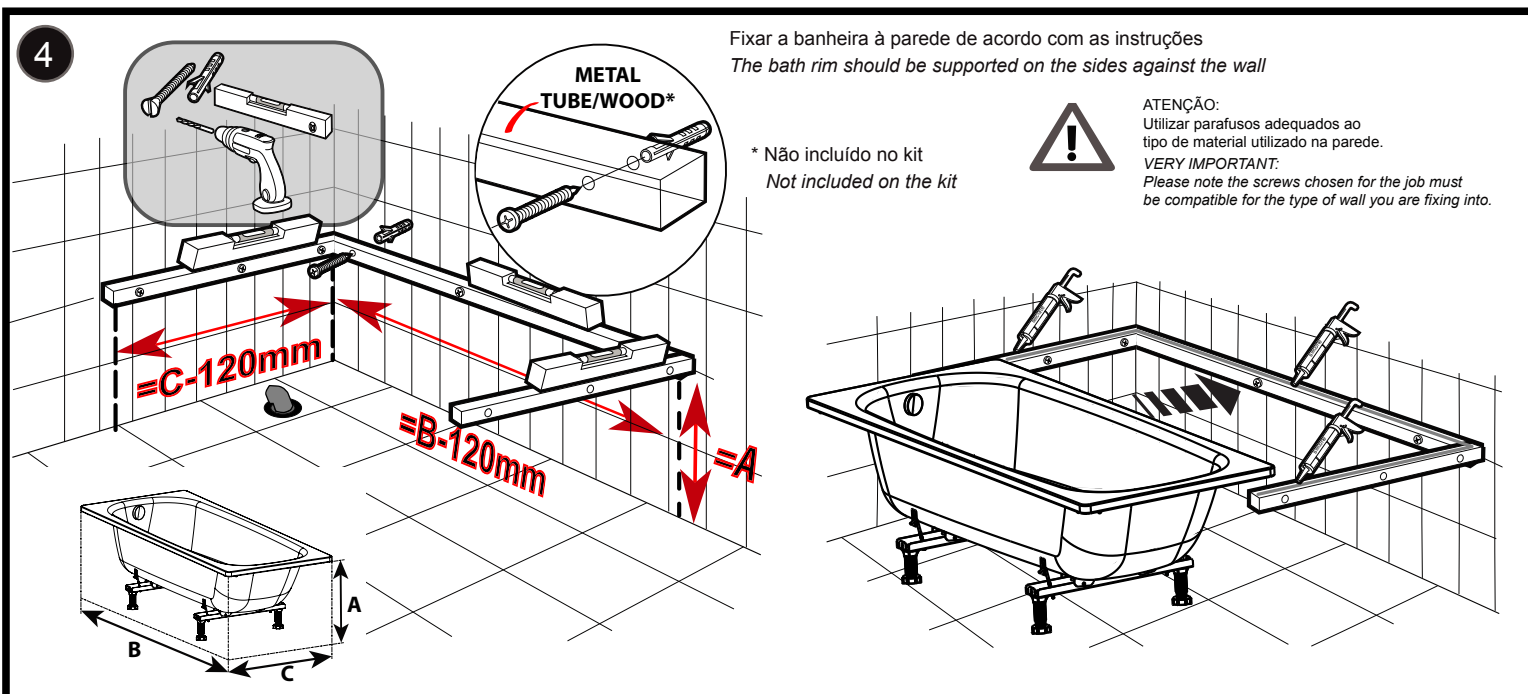


5




Montar as ligações de esgoto no local destinado
Connect the bathtub drain and overflow fittings
to the local sewerage

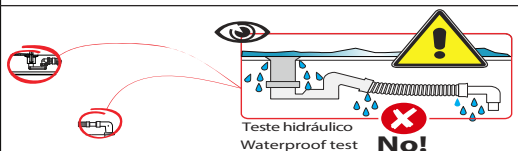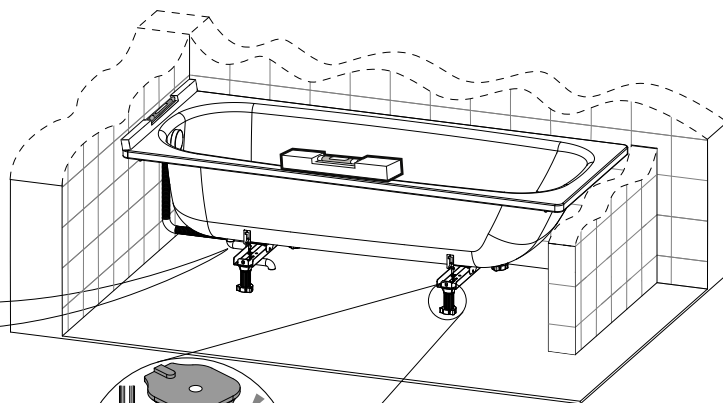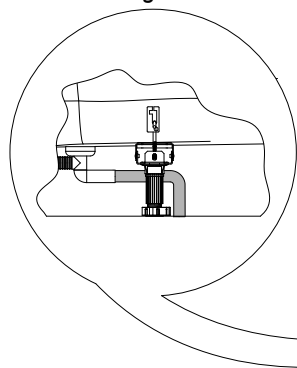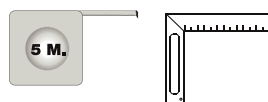

Não incluído no kit
Not included on the kit


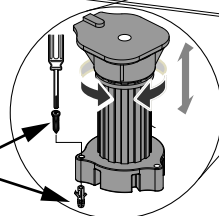


6

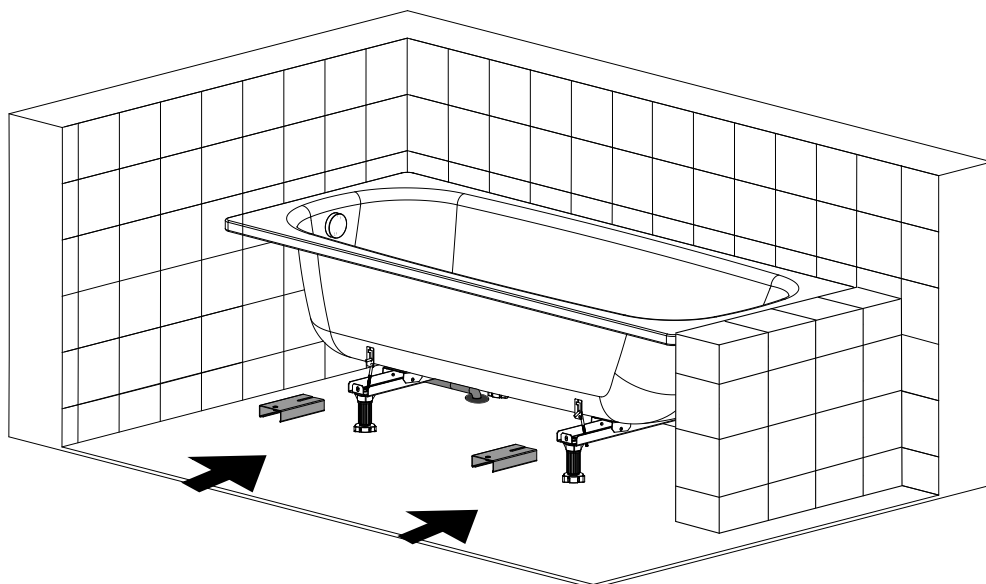

x2

7

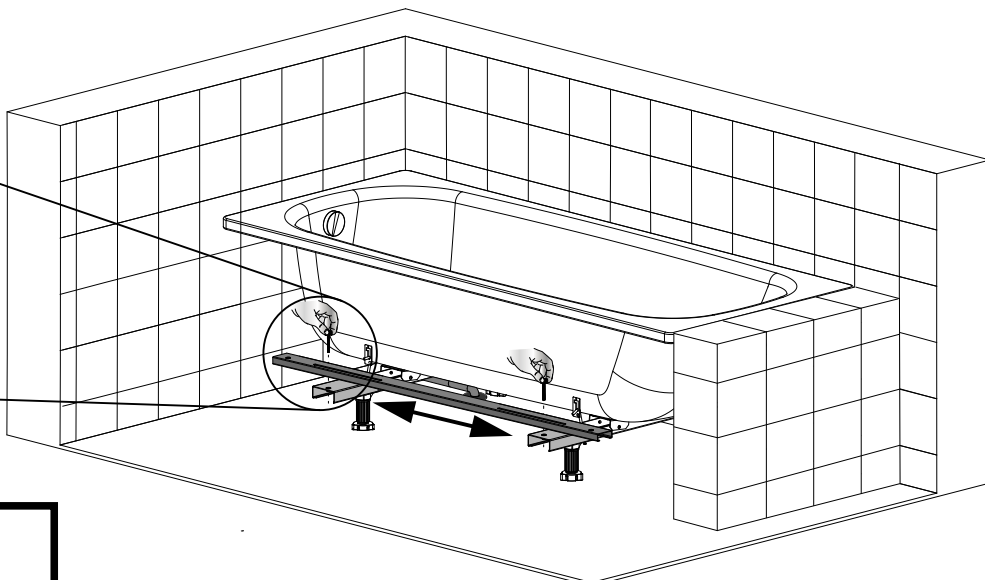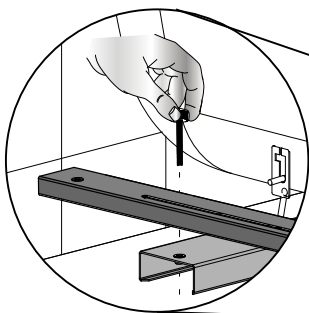


x1



x2


8

Parafuso e cone de aperto do painel
Screw and fastening cone of panel

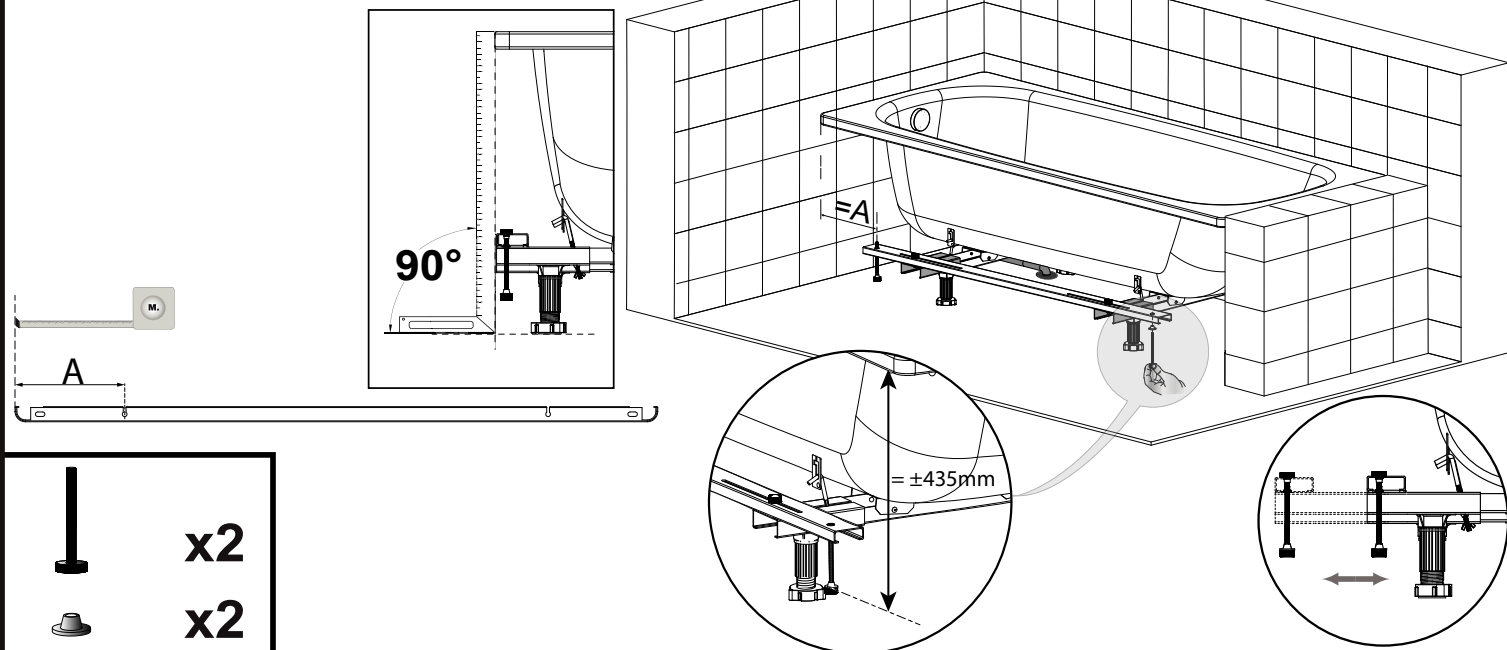


9

Colocação e ajuste
do painel frontal
Front panel assembly

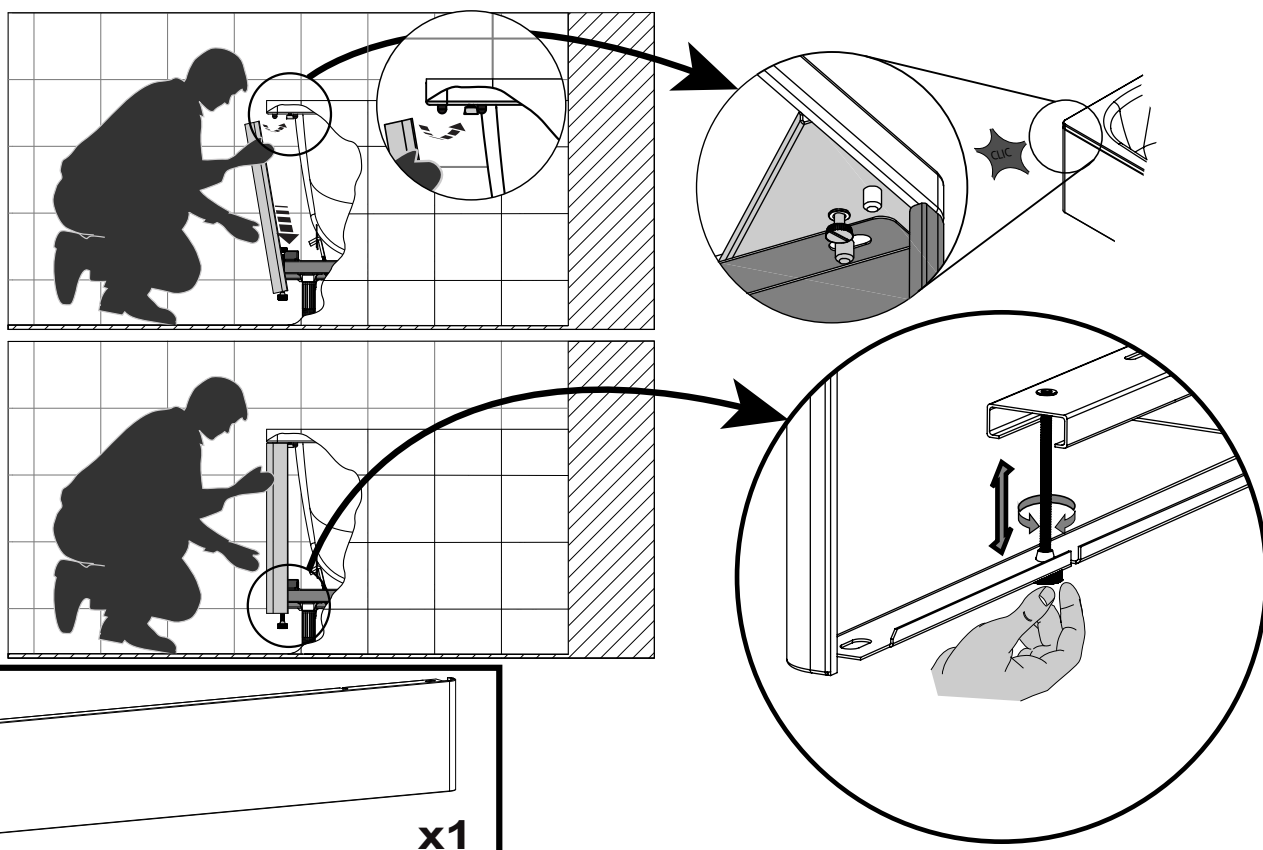

10

Inspeção e verificação
Inspection and verification

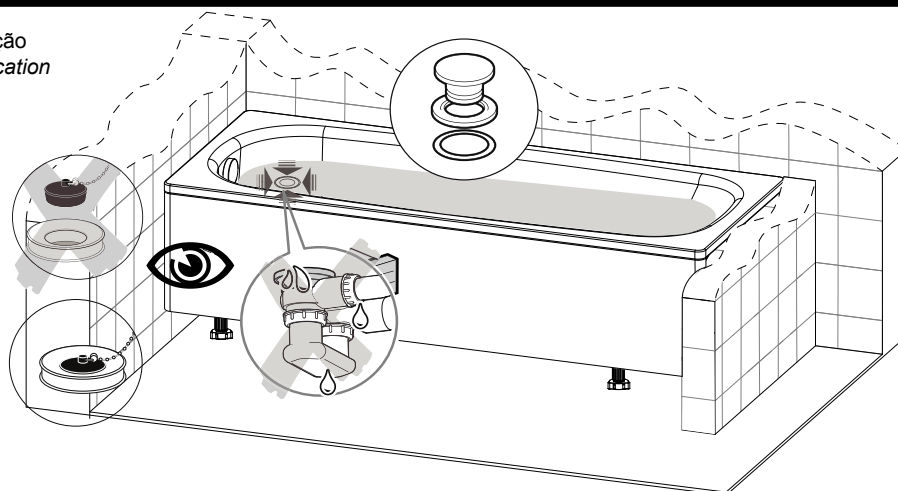


11




Após completar o trabalho
deverá selar todas as juntas
com silicone apropriado.

*After all work has been completed,
all joint edges have to be sealed with
the appropriate flexible sealant*

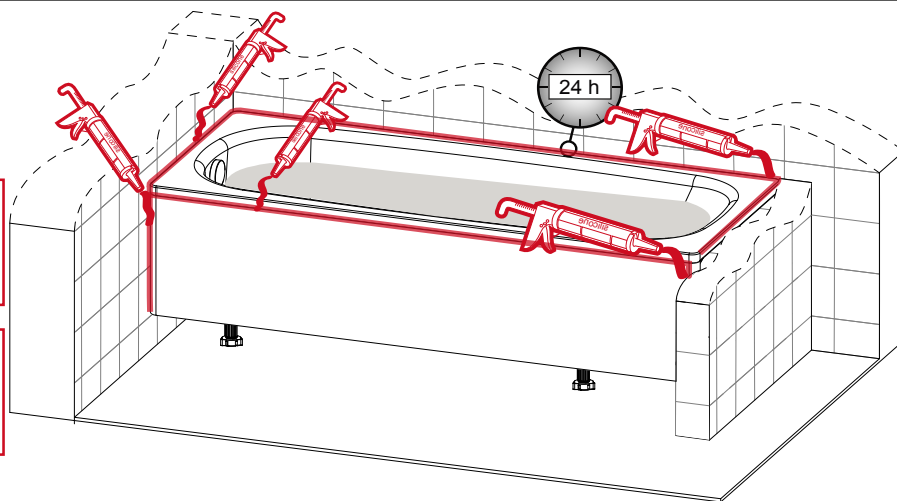


11a

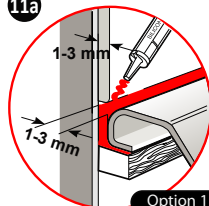

Option 1

Embutida na parede
Recessed in the wall


11b

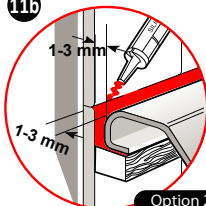

Option 2

Adjacente à parede
Adjacent to the wall

11c

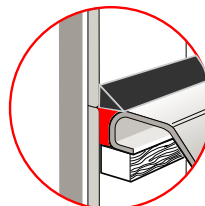

Opcional:
Rodapé (perfil em madeira, plástico, alumínio, azulejo, pedra ...)


Optional:
Bathtub flange (wood, plastic,...)

12

Limpeza
Cleaning



NOK

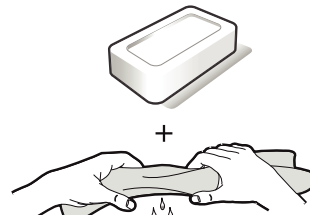

OK

Notas:

Notes:

Notes:

Notas:

Notes:

FLTAPNLF_REV1.

LAUFEN

Laufen Bathrooms AG
Wahlenstrasse 46
CH-4242 Laufen, Switzerland
www.laufen.com

LAUFEN QUALITY CONTROL

Controller's Name:

Fabrication-No.:

Date:



Laufen Bathrooms AG
EN 14516

Postfach 432

CH-4242 Laufen